

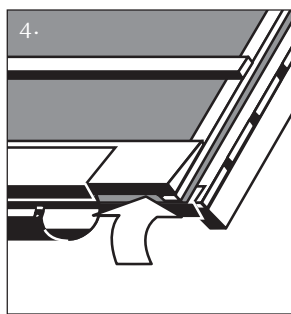
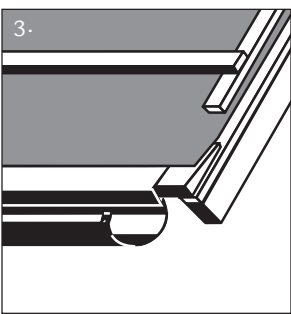
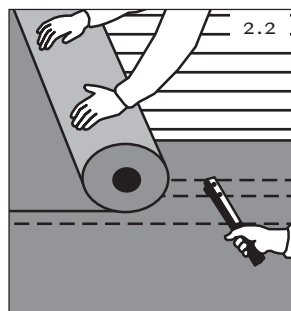
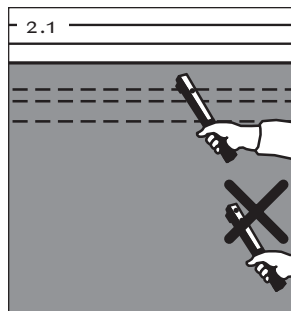
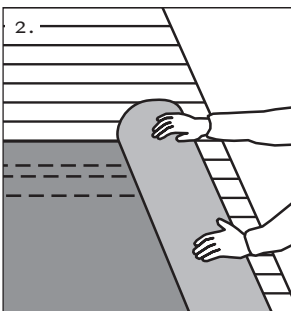
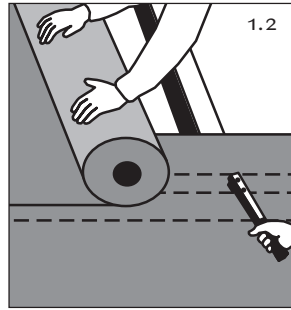
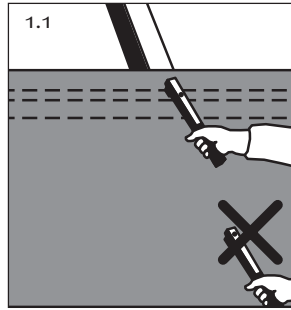
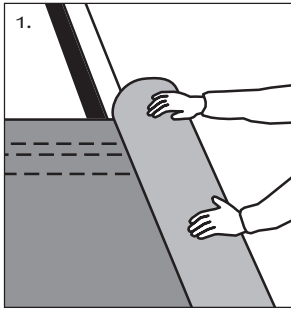
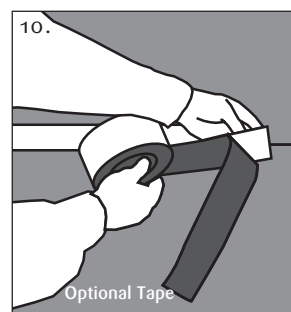
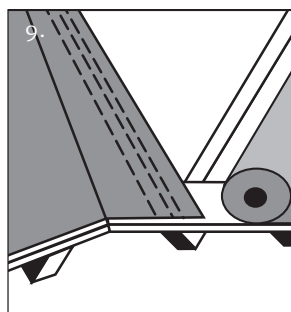
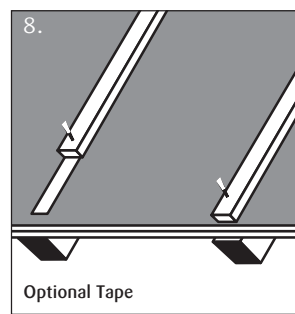
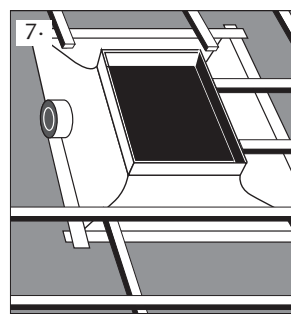


Installation instructions Permo® - Breathable Underlay

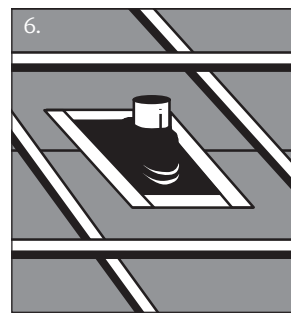

Details

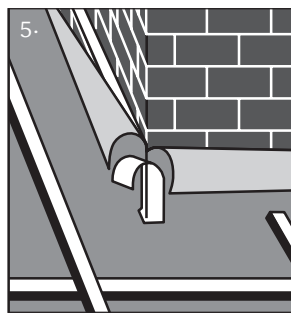

KLÖBER

